WWW.MYCHWAY.COM

40K Cavitation Ultrasound Multipolar RF 635nm Lipo Lase

WL-UU631

User Manual

CONTENTS

I. Warning ····· 1

II. Parts Introduction ····· 2

III. Basal Operation ····· 3

IV. 40K Cavitation Operation Procedure ····· 4

V. Caution for Using 40k ····· 4

VI. Six RF Operation Procedure ····· 4

VII. Caution for RF ····· 5

VIII. Lipo Laser Operation Procedure ····· 5

IX. Illustration of Operation ····· 6

X Application 10

XI. Forbidden Group ····· 10

XII Technical Parameters ····· 10

XIII Accessories 11

.

I. Warning

Thanks for using our company's products, in order to fully make use of the products, we sincerely suggests followings:
Please read the instruction in detail and keep it well for further reading and consulting.
Please follow the instruction to fit and operate the machine correctly.
Please do not remove and change any accessories of the machine.
It forbids others to open and remove the mainframe except the authorized people in the company.
It forbids others to change and maintain the machine except the professional people.
Please contact us if there is any trouble during operation.

Read this user manual indispensable before use ！！

II. Parts Introduction

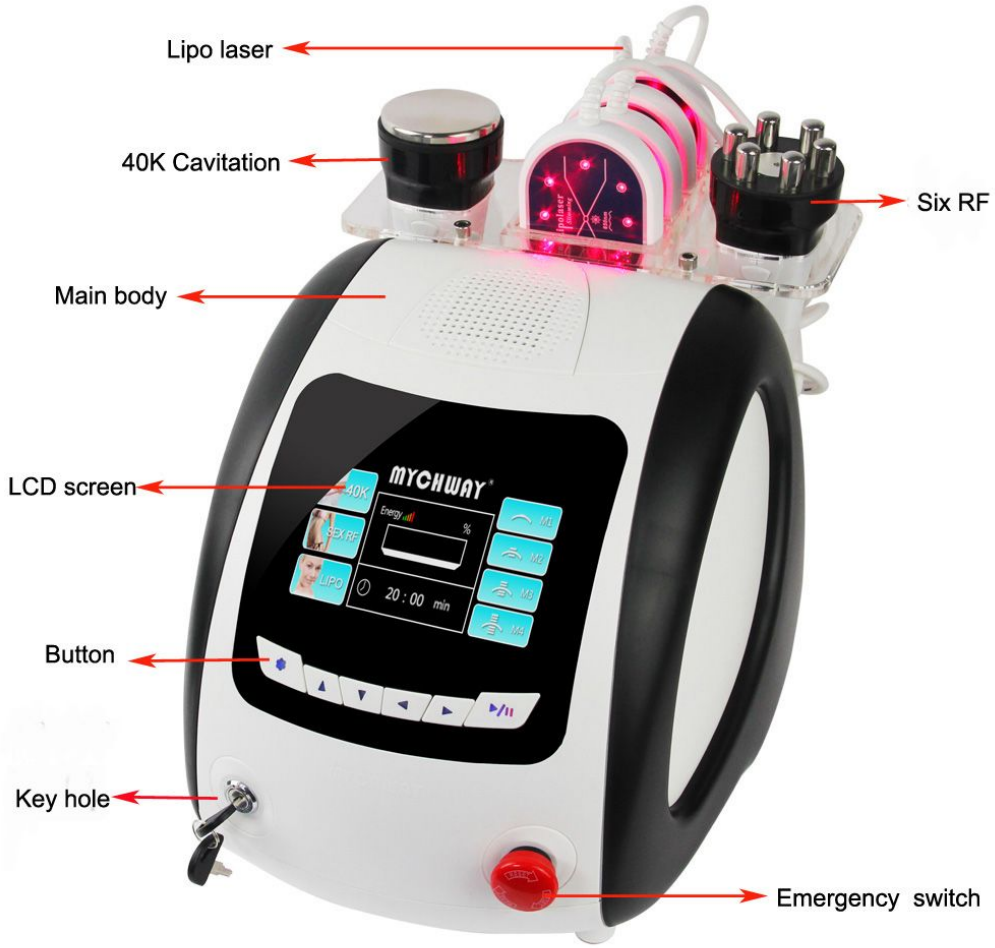

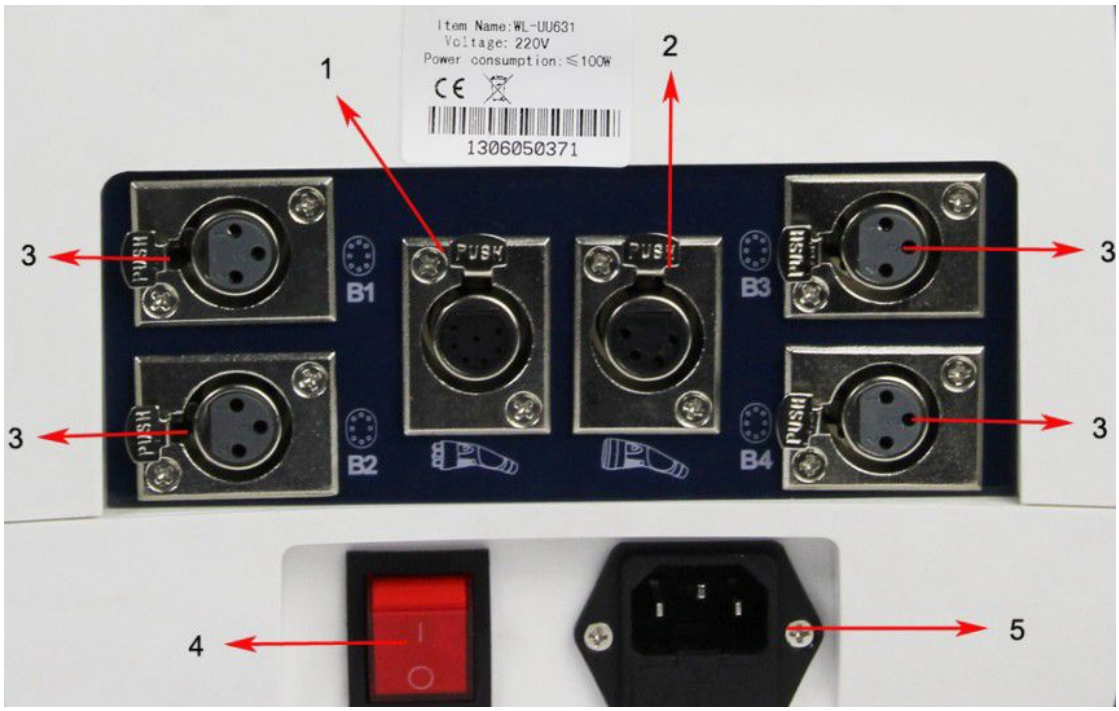

1. Six polar RF socket
2. 40K cavitation socket
3. Lipo laser socket
4. General power switch
5. Power supply socket

III. Basal Operation

1. Put the accessories well and connect them to the host.

1.1 Insert six polar RF work head.
1.2 Insert 40K cavitation work head.
1.3 Insert lipo laser work head.
1.4 Insert power supply line.

2. Turn on the power switch, plug the key, then turn on the emergency switch, enter interface as (Figure 1) shows.

Figure 1

3. Press Menu button, enter interface as (Figure 2) shows.

1. Treating method interface
2. Energy interface
3. Time interface
4. Mode interface

Figure 2

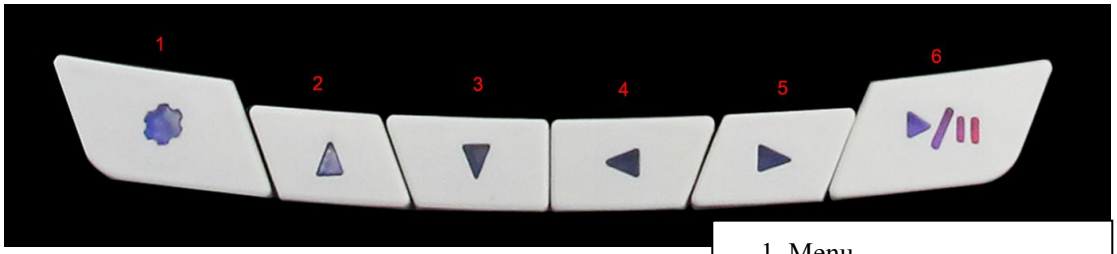

1. Menu
2. Time + 3. Time -
4. Energy + 5.Energy -
6. Start / Pause

IV. 40K Cavitation Operation Procedure

1. Clean the parts and applied ultrasound gel on fleshly parts (e.g abdomen, hip, thigh), the amount depend on moving flexibility of the cavitation explode.

1.1 Mode adjust: Click <1> to adjust the mode 40k cavitation.
1.2 Time adjust: Click <2>,<3> for adjusting time.
1.3 Energy adjust: Click <4>, <5> for adjusting energy.
1.4 Mode Transfer: Click <6> first, make it to the interface for mode transfer, then click <1> to choose the mode which you want.

Mode 1, 2, 3, 4 mean that:
"M1" is continuous working for 3 sec and discontinuous for 2 sec.
"M2" is continuous working for 4 sec and discontinuous for 3sec.
"M3" is continuous working for 1 sec and discontinuous for 1 sec.
"M4" is continuous working for 0.5 sec and discontinuous for 0.5sec.

2. Beautician hold the cavitation head and move slowly on skin, in circle or beeline repeatedly, and the other hand push the fat towards the work head.

3. The machine will pause automatically when the setting time is over. Please press any button to restart the operation.

4. Clean the leftovers with the hot towel, and use warm towel to clean the work head.Please do not clear this head by alcohol

V. Caution for Using 40k

1. Applied enough ultrasound gel on skin needing treated.
2. Do not stay unmoved on any part of your body, do not stay on bones.
3. The total time for each treatment should be within 2 hours,please don’t make cavitation head work over 30mins continuously
4. There will be ultrasonic only when you start the working mode of 40k.
5. Do not allowed to be placed under the state of no-load to avoid the damage caused by high heat.
6. 40K work head can be used on fresh part of the body. Do not use for facial, if the skin is sensitive or becomes unhealthy.

VI. Six RF Operation Procedure

1. Clean the parts and applied RF gel on fleshly parts (e.g abdomen, hip, thigh), the amount depend on moving flexibility of the cavitation explode.

1.1 Click <1> to choose the mode of Six polar RF.
1.2 Time adjust: Click <2>,<3> for adjusting time.
1.3 Energy adjust: Click <4>, <5> for adjusting energy.
1.4 Mode Transfer: Click <6> first, make it to the interface for mode transfer, then click <1> to choose the mode which you want.

2. Move the probe slowly on skin. If there is too much fat, you can increase the output intensity.
3. Clean the leftover with hot towel, and use warm towel to clean the work head.
4. Please do not clear this head by alcohol

VII. Caution for RF

1. Beautician should wear insulated gloves during operation.
2. Do not wear any aglet, both for the beautician and the users.
3. The probe must be fully in contact with skin.
4. Do not make the RF electrode stay on any part without moving. Keep it moving on skin slowly.
5. Skin around eyes and forehead is very thin. The RF output intensity should be relatively weakened.
6. Do not let the laser light straightly shine upon the eyes in case of eyes hurt.
7. The total time for each treatment should be within 2 hours,please don't make RF head work over 30mins continuously

VIII. Lipo Laser Operation Procedure

1. Clean the skin and put the Lipo Laser heads on the area where you want to lost fat. Using a belt or few belts to keep the paddles.

1.1 Click <1> to choose the mode of Lipo Laser
1.2 Time adjust: Click <2>,<3> for adjusting time.
1.3 Energy adjust: Click <4>, <5> for adjusting energy.
1.4 Mode Transfer: Click <6> first, make it to the interface for mode transfer, then click <1> to choose the mode which you want.

!!Caution: No more than 1 hour for a area during one treatment

IX. Illustration of Operation

40K Cavitation,Sixpolar RF

THIGH

Treated time: 30minutes

1. From down to upper, pushing to the groin to dredge the lymph.

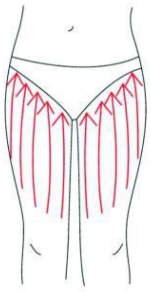

2. From down to upper, circling push by anticlockwise can help decomposing fatness.

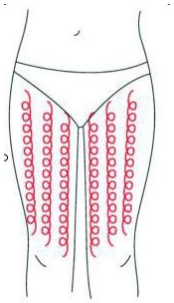

3. Also can push by come-and-go to decompose fatness.

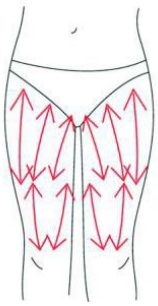

4. Pull from the knee and muscle texture to upper, can improve the curve.

BUTTOCKS

Treated time: 20 to 30minutes

1. Along the lymph direction, pulling to the waist.

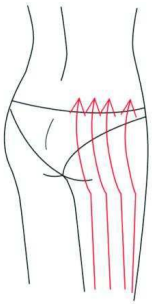

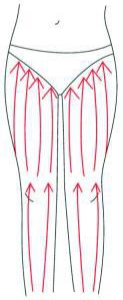

2. From upper to down, by anticlockwise gesture, pull come-and-go.

3. Along the muscle of arm, pull up to lift and tight the muscle.

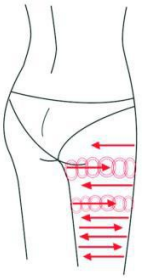

BACK

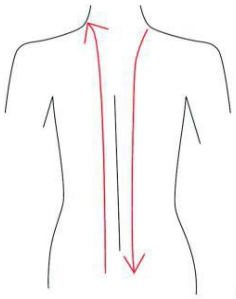

Treated time: 20 to 30minutes

1. First by come-and-go, pushing the bladder nerve 2 to 3 times.

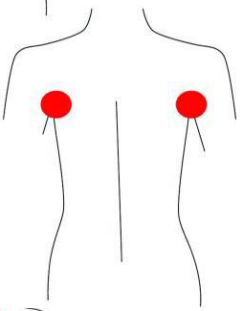

2. Circling by anticlockwise to stimulate the underarm lymph node.

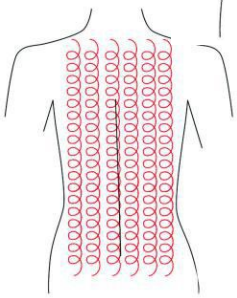

3. On the back, using anticlockwise circling method can help to decompose the fatness.

4. Using lymph drainage gesture, pull the toxin to the lymph node, can help improving the back curve.

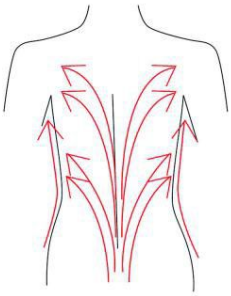

ARM

Treated time: 30minutes

BACK SIDE

1. From the inner elbow to the armpit, doing lymph drainage.

2. Circling to stimulate the lymph node.

3. By anticlockwise or come-and-go pushing, decomposing the fatness.

FACADE

1. From the elbow to the oxter, doing tightening gesture.

ABDOMEN

Treated time: 20 to 30minutes

1. From small to large, by clockwise direction, circling around the navel, can help peristalsis of the large intestine.

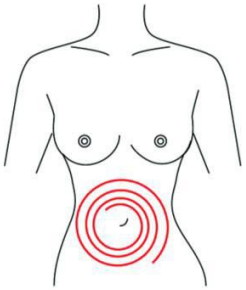

2. From small to large, by anticlockwise direction, circling push down.

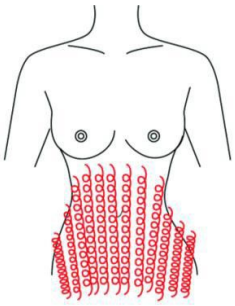

3. From the belly and muscle texture, pull to the groin.

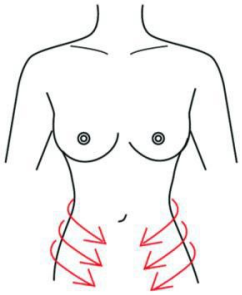

4. Through lymph drainage gesture, taking the toxin to the place of groin.

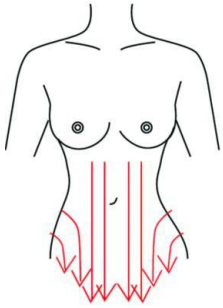

635nmLipo Laser

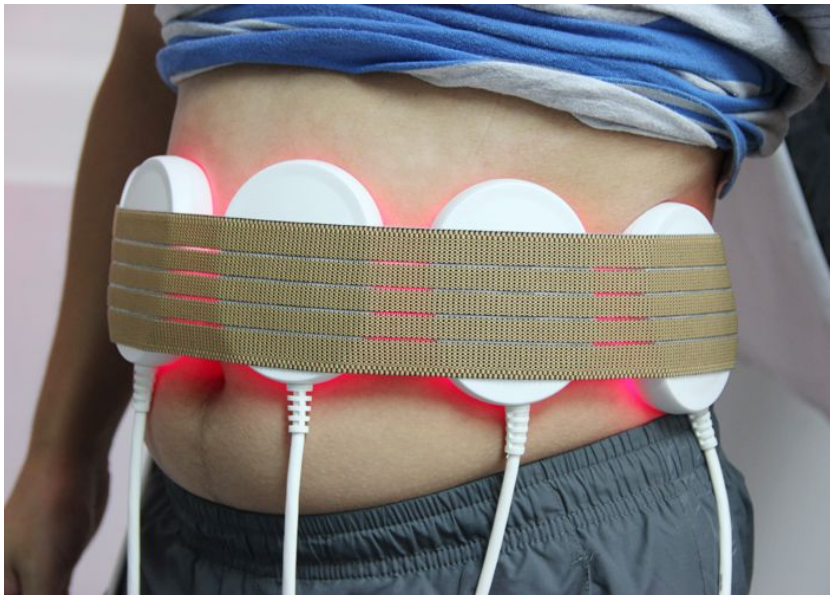

X Application：

Cavitation：blast fat on arm, abdomen, buttocks ,thigh and leg

RF:cheek, lower jaw, neck skin tightening; nasolabial fold improvement; waist and abdomen, limbs, weight loss; hips, big legs, orange peel-like skin improvement.
Lipo Laser:blast fat on arm,abdomen,buttocks,thigh and leg

XI. Forbidden Group

1. Pregnancy
2. Scarring, infection of the treatment area
3. History of keloid scarring
4. Use of medication known to induce photosensitivity
5. Fragile skin
6. Patients undergoing the surgical procedure without consulting with a surgeon
7. Patients with tumors
8. Patients with serious disease
9. Patients with low/high blood pressure

XII. Technical Parameters

Rated input voltage: AC220V-240V 50Hz /AC110V-120V 60Hz
Rated output power: 350VA
Weight / Dimensions: 4.5Kg / 9.5"x12.7"x10.2"

Cavitation frequency: 40KHz
Cavitation Power: up to 60W
Cavitation tip: 60mm diameter

RF frequency: 3MHz
RF power: up to 150W
RF type: six polar

Laser wave length: Laser diode AIGalnp 635-650nm
Maximum output power: 60W
Power of each diode laser: 100mw
Output intensity: 3.0W/CM2(Belly), 3.6W/CM2(Thigh), 2.4W/CM2(Arm), 1.5W/CM2(Face)
Paddles: 4 paddles with 8 diode laser each

XIII Accessories

Please refer to packing list.

If you need more accessories and consuming material, please refer to the following list and order what you need with our company.

Artical	Qty
Main machine	1
40K Cavitation head	1
Sixpolar RF head	1
8x100mw big diode lipo laser paddles	4
Power supply cord	1
Holder	1
Key	1